




Setup Guide T9550 LCK

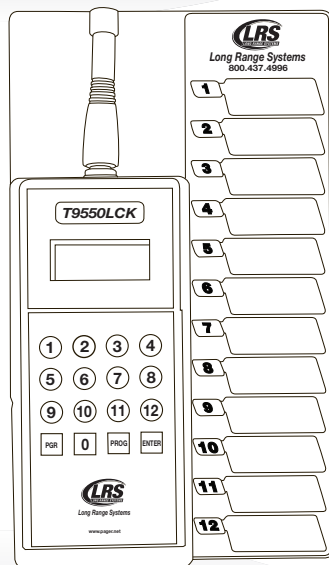


Items Included

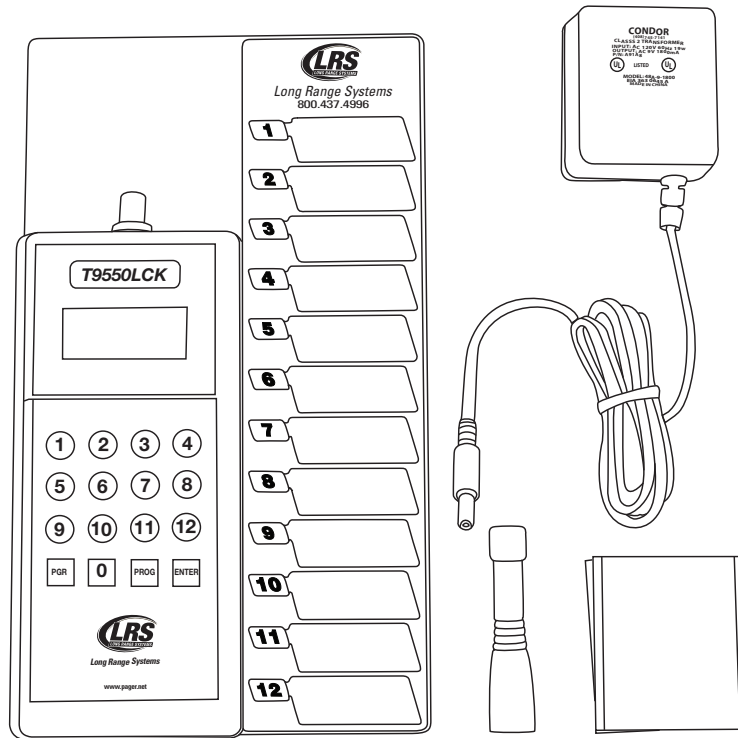


1

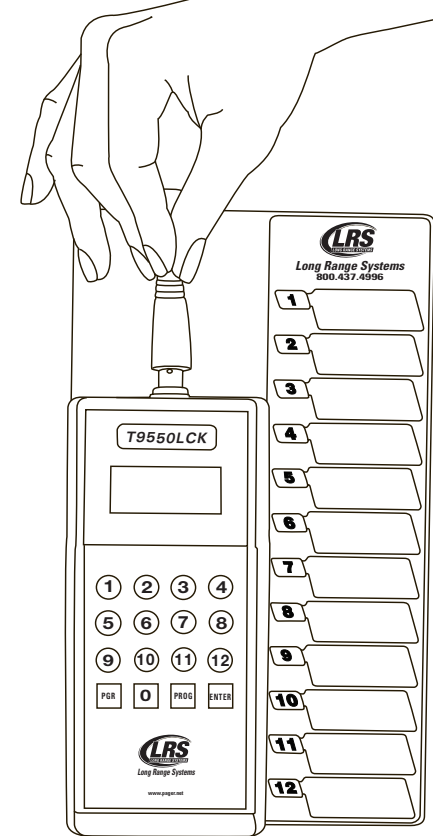


2

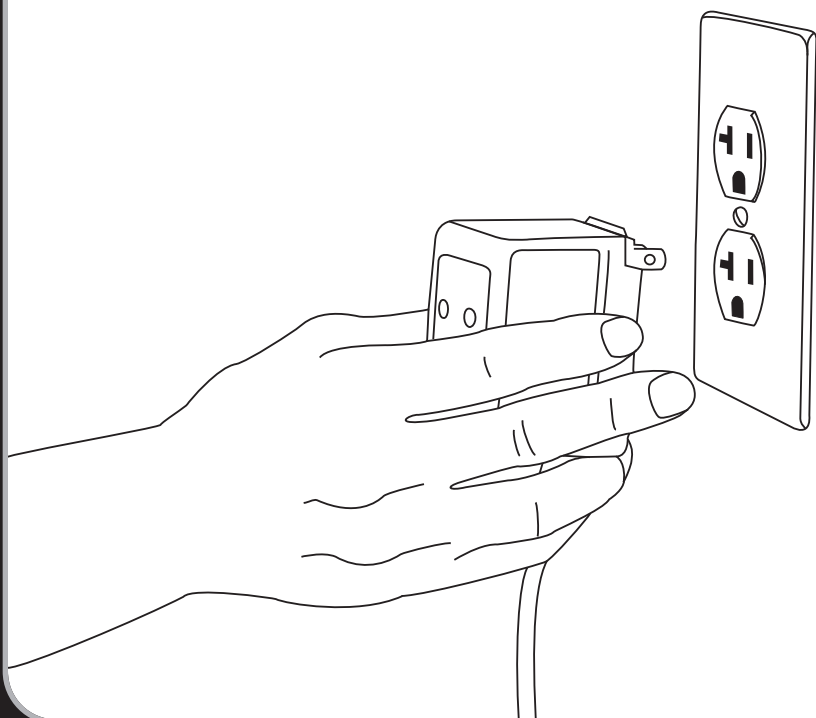


3

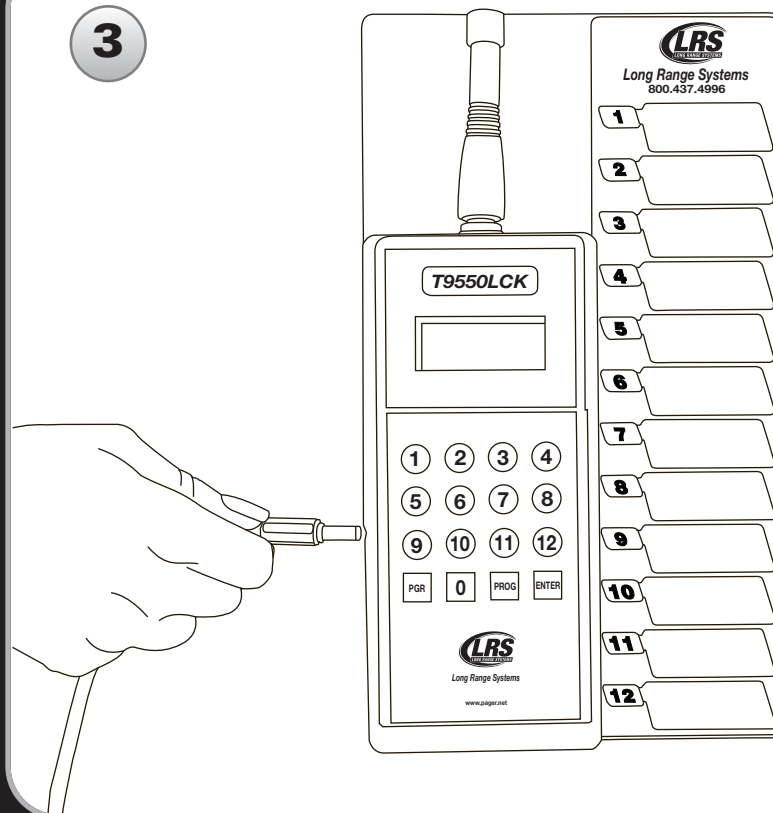

4

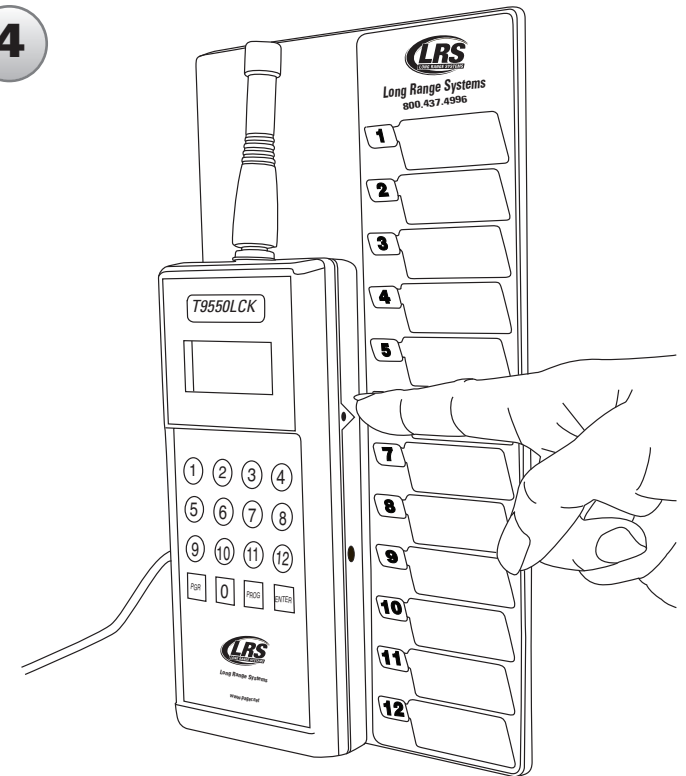

5

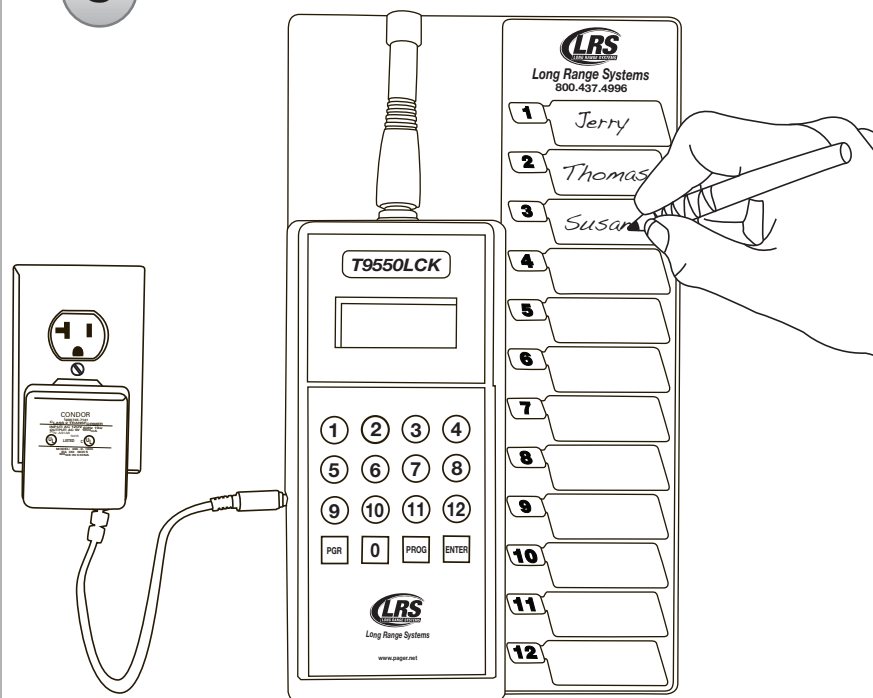

See back for basic operation instructions. For complete instructions, go to www.pager.net.



Long Range Systems
4550 Excel Parkway, Suite 200
Addison, TX 75001
www.pager.net • 800.437.4996

T9550LCK BASIC OPERATIONS GUIDE



Note: The T9550 LCK factory defaults are the most commonly used settings (Restaurant ID = 0, Vibration Mode = 1).

PAGING

For pagers numbered 1 – 12:

1. Press the pager number
2. The unit will automatically send a page

For pagers numbered 13 and higher:

1. Press 
2. Enter the pager number (using the 0-9 keys)
3. Press the  key

PAGE ALL CALL

If all staff pagers need to be called at once:




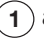











1. Press 
2. Press  -  - 
3. Press the  key

SYSTEM SETTINGS

Setting the Vibration Mode


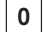
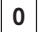

Vibration mode determines the number of times a pager will vibrate when paged. (EX: When a page is sent from the transmitter, the pager will vibrate once)

To set the vibration mode:

- 1 vibration: Press 
Press  -  -  and press 
- 2 vibrations: Press 
Press  -  -  and press 
- 3 vibrations: Press 
Press  -  -  and press 

System Reset





Perform a system reset if the transmitter's battery power has been completely depleted. The system will reset to factory default (Restaurant ID = 0, Vibration Mode = 1).

1. Press 
2. Press  -  -  and press 

Set Restaurant ID

The Restaurant ID **factory default** setting is **0**. Your system may or may not be shipped with the factory default setting ID = 0. Contact LRS to verify your Restaurant ID.

To change the ID:

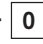




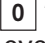
1. Press 
2. Press  -  - # (EX: **9-0-3**, Restaurant ID = **3**)
3. Press 

MAINTENANCE FUNCTIONS


Range Test

Perform a range test to determine the effective range of the T9550LCK.

Note: Be sure to remove pagers from charging base before performing the range test

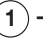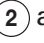1. Press 
2. Press  -  -  and press 
3. When the “” begins scrolling across the screen, pagers will vibrate every 5 seconds (as long as they are receiving the signal).
4. Take a pager and walk around the area to verify that the pager operates in all areas.
5. When a pager is out of range, it will stop vibrating every 5 seconds.

Check the Transmitter Battery level

1. Disconnect the transmitter from the power adapter/charger
2. Press  and then 

The unit will show a number from 0 to 5:



- If the unit shows **4 or above** – the charge is adequate for normal use
- If the unit shows **3** – it is ok for short term use (1 - 2 hours)
- If the unit shows **2 or less** (including blank) – it must be recharged before use

Battery Charge

1. Plug the power supply/charger into the transmitter unit.
2. After 10 seconds press and release the power-reset button located on the side of the transmitter. The display will light.
3. Within 5-10 seconds, the display light will disappear and the screen will remain blank. This is an indication that the battery is charging.
4. Allow the keypad to charge for at least 12 hours.
5. Check the battery level to ensure that the battery is fully charged.

PAGER PROGRAMMING (Star pagers only)

If you would like to assign or reassign numbers to pagers, contact LRS to verify your restaurant ID before proceeding.

1. Be sure to set the LCK for the restaurant ID in use.
2. Remove the pager from the charger and wait until it stops vibrating.
3. Press 
4. Enter the pager number you wish to assign to the pager (**Choose #: 1 – 899**).
5. Press 
6. After the pager completes one glow mode cycle, page it to ensure that it is programmed correctly.

To download a full instruction manual visit www.pager.net/support



800.437.4996
www.pager.net
XU-0102 092509